
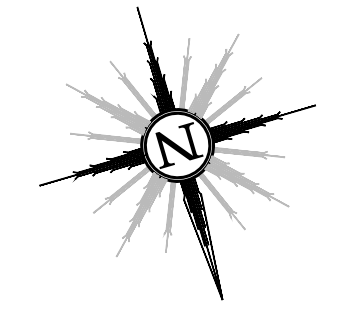


ROOF DEMOLITION NOTES:
 GENERAL NOTES: SEE MECHANICAL AND PLUMBING DRAWINGS FOR FURTHER DEMOLITION INFORMATION.

1. REMOVE ALL DUCTS AND HVAC EQUIPMENT, PREPARE DUCT OPENINGS FOR INFILL.
2. REMOVE ALL ELECTRICAL CONDUIT, BOXES AND EXPOSED WIRING.
3. REMOVE EXISTING ROOFING INCLUDING ALL CANALES AND RETAIN EXISTING PARAPET OPENINGS IN PREPARATION FOR NEW CANALES.
4. INSPECT ALL EXPOSED WOOD DECKING AND ITEMIZE AND LOCATE IN WRITING ALL DAMAGED OR ROTTED WOOD DECKING OR BEAMS AND IMMEDIATELY PROVIDE THIS INFORMATION TO ARCHITECT AND OWNER.
5. EVALUATE CRICKET AND RUNOFF LOCATION AND SLOPE TO DETERMINE IF PROPER DRAINAGE IS PROVIDED.
6. INSPECT INSULATION BELOW DECKING AT EACH ROOF LEVEL. REPORT FINDINGS TO ARCHITECT AND OWNER.
7. CONTRACTOR TO TEMPORARILY COVER AND WATERPROOF ANY AND ALL AREAS EXPOSED DURING DEMOLITION AND CONSTRUCTION.
8. REMOVE EXPOSED VIGA ENDS TO 4" BEHIND FACE OF STUCCO AND PREPARE FOR RESTUCCOING.
9. SHORE EXISTING PORTAL STRUCTURE AND REMOVE THE EXISTING BEAM, CORBELS AND COLUMNS TO PREPARE FOR NEW WOOD BEAM, CORBELS AND COLUMNS.

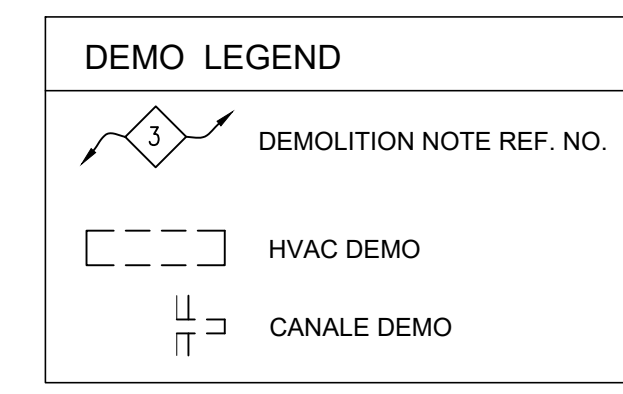

REVISIONS

SUBY BOWDEN + ASSOCIATES, LLC
 333 MONTEZUMA AVENUE, SUITE 200
 SANTA FE, NM 87501 PH (505)983-3755 FX (505)983-8118

SAN ILDEFONSO PUEBLO
 02 TUNYO PO
 SANTA FE, NM 87506

DEMOLITION ROOF PLAN
 TEWA CENTER

CHECKED	STB-BG
DATE	MAY 16, 2022
SCALE	AS SHOWN
DRAWN	SS,JW,BG
JOB	SAN 2021-22
DRAWING	DEMO ROOF PLAN
SHEET	

BID DOCUMENTS ONLY - NOT FOR CONSTRUCTION

A1.11